 
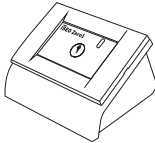
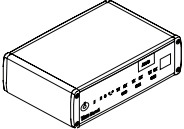
 
 
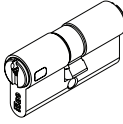
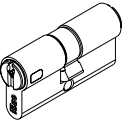
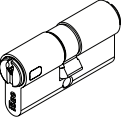
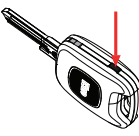


V364 F9000 ON: light and acoustic signals

Device	Condition	Light & acoustic signals	Meaning
  Reader ON-LINE with Atlas.	F9000 Key inserted into the reader.  + Reader connected to Atlas by RS485 cable. 	● steady	Reader ON-LINE: waiting for reading.
		● + ● steady	Reader OFF-LINE.
		● fast flashing	Key reading or writing process in place (do not remove the key).
		4 x ●	Key validation/update successfull. On-Line door opening.
		4 x ● + ● alternately	Key validation/update successfull but key not enabled to open the On-Line door. Also in case of key EXPIRED, NOT YET VALID, Out of time schedule.
		4 x ● slow	Key REVOKED or SUSPENDED.
		7 x ● fast	Key not programmed, ERASED or belonging to another plant (reading error/wrong data).
		3 x ● + ● together	Door Schedule Passage Mode ON.
		5 x ● + ● together	Door Schedule Passage Mode OFF.
 	User key inserted into F9000 cylinder.	2 x ● + 1 x ●	Cylinder NOT INITIALIZED. Any F9000 key opens.
		7 x ● fast	Key not programmed, REVOKED, ERASED, in Black List or belonging to another plant (reading error/wrong data).
		1 x ●	ACTIVE key: opening successfully.
		3 x ●	Key not enabled to open because: wrong door, NOT YET ACTIVE, EXPIRED, NOT VALIDATED, SUSPENDED, Out of time schedule, Lockout.
		1 x ● + ●	ACTIVE key: opening successfully but Low Battery (battery replacement recommended).
		● steady 3 sec	Battery Empty (opening not allowed).
 	Programming key inserted into F9000 cylinder.	● flashing 20 sec ... ● + ● steady ... 3 x ● fast	Upgrade F9000 cylinder software (do not remove the key until the end of the upgrade procedure).
		1 x ● ... 3 x ● fast	Initialize Door or Update Door Configuration (do not remove the key until the end of the procedure).
		● + ● steady ... 3 x ● fast	Reset Door (do not remove the key until the end of the procedure).
		3 x ● fast	Action performed. For example: cylinder events download or black-list successfully loaded into cylinder.
		7 x ● fast	Key not programmed, FORMATTED or belonging to another plant (reading error/wrong data).
		1 x ● + ●	Low Battery.
		● steady 3 sec	Battery empty (key not working).

V364 F9000 ON: light and acoustic signals

Device	Condition	Light & acoustic signals	Meaning
 	Emergency key inserted into F9000 cylinder.	2 x ●● + 1 x ●	Cylinder NOT INITIALIZED. Any F9000 key opens.
		7 x ● fast	Key not programmed, REVOKED, ERASED, in Black List or belonging to another plant (reading error/ wrong data).
		1 x ●	ACTIVE key: emergency opening successfully.
		3 x ●	Key not enabled to open because: SUSPENDED.
		1 x ●●	ACTIVE key: opening successfully but Low Battery (battery replacement recommended).
		● steady 3 sec	Battery Empty (opening not allowed).
 	Lockout key inserted into F9000 cylinder.	2 x ●● + 1 x ●	Cylinder NOT INITIALIZED. Any F9000 key opens.
		7 x ● fast	Key not programmed, REVOKED, ERASED, in Black List or belonging to another plant (reading error/ wrong data).
		1 x ●	ACTIVE key: opening and block all access user.
		3 x ●	Key not enabled to open because: SUSPENDED.
		1 x ●●	ACTIVE key: opening successfully but Low Battery (battery replacement recommended).
		● steady 3 sec	Battery Empty (opening not allowed).
 	Reversal Lockout key inserted into F9000 cylinder.	2 x ●● + 1 x ●	Cylinder NOT INITIALIZED. Any F9000 key opens.
		7 x ● fast	Key not programmed, REVOKED, ERASED, in Black List or belonging to another plant (reading error/ wrong data).
		1 x ●	ACTIVE key: opening and bring back to door normal operation.
		3 x ●	Key not enabled to open because: SUSPENDED.
		1 x ●●	ACTIVE key: opening successfully but Low Battery (battery replacement recommended).
		● steady 3 sec	Battery Empty (opening not allowed).
Bluetooth switch-on button 	F9000 ON key Bluetooth switch-on: press 1 time.	●↔● alternately 10 sec.	Bluetooth communication in progress (only on F9000 ON models).
	F9000 ON key battery check: keep pressed the bluetooth switch-on button for 3 sec.	1 x ●	Battery OK.
		1 x ●●	Battery LOW (battery replacement recommended).
		1 x ●	Battery EMPTY (opening not allowed).