
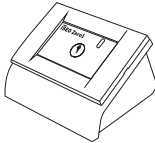
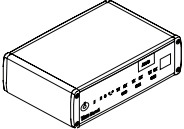




V364 F9000: light and acoustic signals

Led's Device	State	Light & acoustic signals	Meaning
  Reader ON-LINE with Atlas.	F9000 Key inserted into the reader.  + Reader connected to Atlas by RS485 cable. 	● steady	Reader ON-LINE: waiting for reading.
		● + ● steady	Reader OFF-LINE.
		● fast flashing	Key reading or writing process in place.
		4 x ●	Key validation/update successfull. On-Line door opening.
		4 x ● + ● alternately	Key validation/update successfull but key not enabled to open the On-Line door. Also in case of key EXPIRED, NOT YET VALID, out of time schedule.
		4 x ● slow	Key REVOKED (ERASED) or SUSPENDED.
		7 x ● fast	Key not programmed, FORMATTED or belonging to another plant (reading error/wrong data).
		3 x ● + ● together	Door Schedule Passage Mode ON.
		5 x ● + ● together	Door Schedule Passage Mode OFF.
 	User key inserted into F9000 cylinder.	2 x ● + 1 x ●	Cylinder NOT INITIALIZED. Any F9000 key opens.
		7 x ● fast	Key not programmed, FORMATTED or belonging to another plant (reading error/wrong data).
		1 x ●	ACTIVE key: opening successfully.
		3 x ●	Key not enabled to open because: wrong door, NOT YET ACTIVE, EXPIRED, NOT VALIDATED, REVOKED (ERASED), SUSPENDED, out of time schedule or key in Black List.
		1 x ●	ACTIVE key: opening successfully but Low Battery.
		1 x ●	Key enable to open but Battery Empty (no opening).
 	Programming key inserted into F9000 cylinder.	● + ● alternately	Communicaton in progress between key and cyinder. For example during Initialization process.
		● 3 sec + 2 x ●	Cylinder Initialization or Reset to factory.
		1 x ● + 2 x ●	Cylinder events downloading.
		2 x ●	Action performed. For example: black-list successfully loaded into cylinder.
		7 x ● fast	Key not programmed, FORMATTED or belonging to another plant (reading error/wrong data).
	User and Program-ming key battery check: press the key-head centre for at least 3 sec.).	1 x ●	Battery OK.
		1 x ●	Battery low.
		1 x ●	Battery empty.